

Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



Apply glue to the bottom side of the box. Using 1-1/4" screws fasten it to the bottom of the sub table. Make sure it is center and square to a table side.


Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)

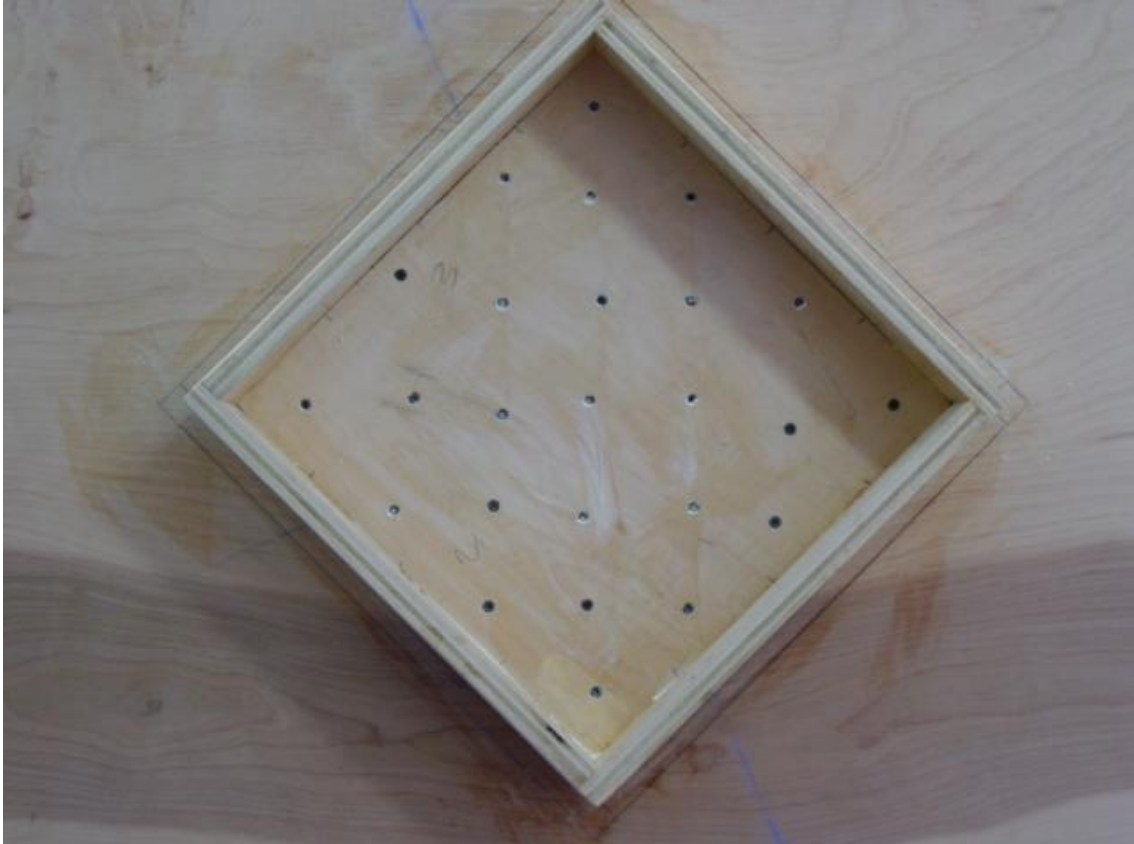

Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



Go ahead and fit it all together. Fit the Octagon ring and play slab. Looks good.

Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



Phase Three

The Pedestal And Table Connection (continued)



That's it with this phase. In the next phase we stain, ploy and install a little hardware. If you have not given it any though start thinking about what cloth to use.

Phase Four

Stain, Poly, Hardware and Cloth



Just about there guys. Stain is really a matter of taste. I like the dark look of wood so I picked a Red Mahogany from MinWax. Pick your stain if any at all. I also picked a Minwax Fast-Drying Polyurethane Semi-Gloss Poly. Follow the directions on the can and stain at will. Don't forget the finish sanding the Table with 220 grit. Before you apply the second coat of poly touch up the table with a light sanding with 220 grit paper.

Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Lets add some foot pads to the feet of the legs. They should be adjustable so that you can level it on any floor. What I have installed are simple turn in with inserts.

Phase Four

Stain, Poly, Hardware and Cloth (continued)



For connecting the table to the pedestal I used 1/4x20 wing bolts into a insert. Use four wing bolts and place the insert closer to the corner then the middle.

Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



I wrapped the playing slab with two layers of White Armo Fleece (1540657) for the padding. Use 3M Super77 Spray Adhesive on play slab and also between the two layers of batting. Cut out two layers of batting for the chip holders and also glue with the 3M.

Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



Once the batting is on you can wrap the cloth tightly on the play slab and patch over the chip holder wells. Drop the Octagon ring over the table and press in if you have to. I used 1-1/4" sheetrock screws to secure the ring and play slab from the underside.

Phase Four

Stain, Poly, Hardware and Cloth (continued)



Phase Four

Stain, Poly, Hardware and Cloth (continued)



The finished product!!!

Phase Four

Stain, Poly, Hardware and Cloth (continued)



The finished product!!!

Phase Four

Stain, Poly, Hardware and Cloth (continued)



The finished product!!!